


HOW TO INSTALL THIS SINGLE OR DOUBLE CYLINDER ENTRANCE HANDLE LOCKSET

1


MARK DOOR & BORE HOLES

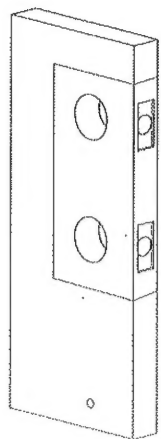

- Fold template over edge of door, mark site 60mm(2 3/8") or 70mm(2 3/4") of holes.
- Bore a $\phi 54\text{mm}(2\frac{1}{8})$ a $\phi 41\text{mm}(1\frac{5}{8})$ two $\phi 25\text{mm}(1")$ and a $\phi 8\text{mm}(5/16")$ holes through door.
- Cut two $58 \times 26 \times 3\text{mm}(2\frac{9}{32} \times 1 \times 1/8)$ base.

2


INSTALL LATCH

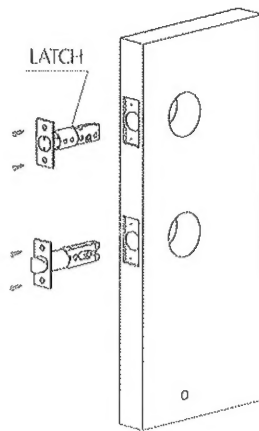

- Adjustable latch of 60mm(2 3/8") or 70mm(2 3/4") backset.
- Push the deadbolt inward keeping the arrow sight in deadbolt always upward.

3


INSTALL OUTSIDE HANDLE

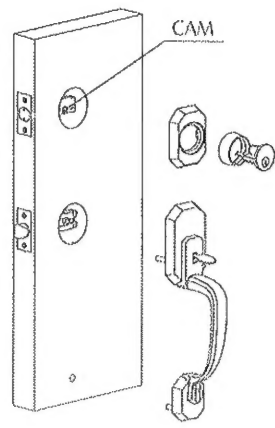

- Operating tail in outside cylinder insert into the cam horizontally.

4


INSTALL INSIDE HANDLE (INSIDE KNOB/LEVER)

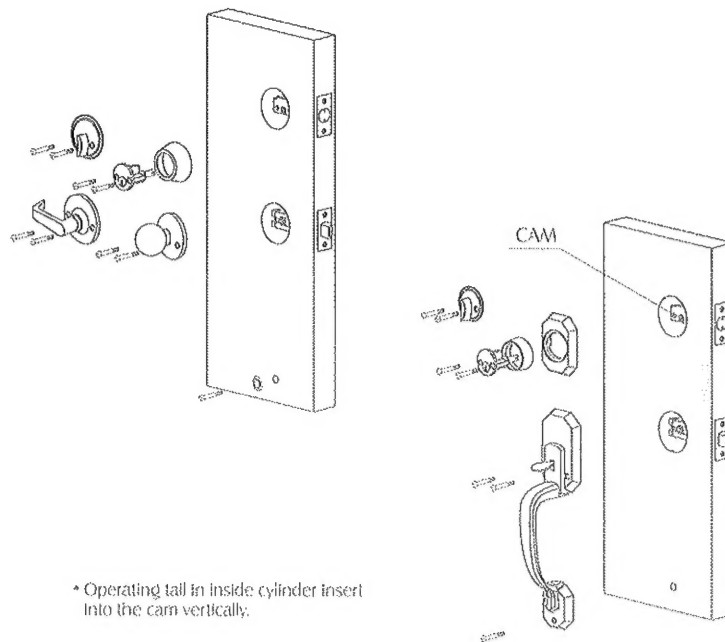

- Operating tail in inside cylinder insert into the cam vertically.

5


INSTALL STRIKE

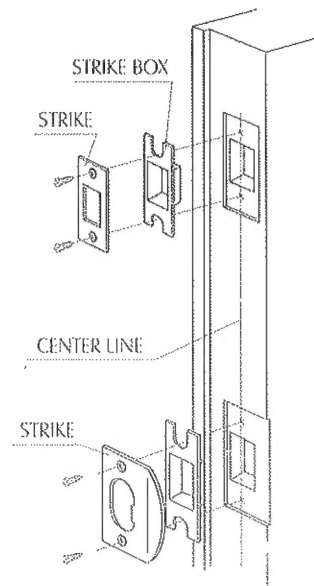

INSTRUCTION FOR ADJUSTABLE LATCH



The cam is pushed fully to the right for 70mm(2 3/4") backset. (During the adjustment, keeping two teeth of the cam to forward always.)



Press the end of deadbolt, Turn the latch cover pull or push, make backset become 70mm(2 3/4") or 60mm(2 3/8").